

# INSTRUCTIONS



For better results (easier landscaping and additional noise reduction) glue a layer of cardboard to the top of plywood with contact cement. Use heavier card-stock, similar to the cardboard used for backs of notepads.

Assemble the tracks, position the full assembly on the layout, then secure it with pins as shown on the pictures. Make sure the pins don't create any distortion or tension on your assembly.




Stick the foam roadbed to the layout following the drawn lines. To learn the correct techniques of curved roadbed installation, practice it on a separate piece of cardboard. Keep a small piece of protective paper handy, so direct touching of sticky surfaces by your fingers can be avoided.

## #21502 Self adhesive roadbed



Draw the outline of tracks holding the pencil a more flat position, so the outline will be less wavy. Mark the starting line of turnouts, connect the missing lines at the turnout boxes using a #8591 track or template.

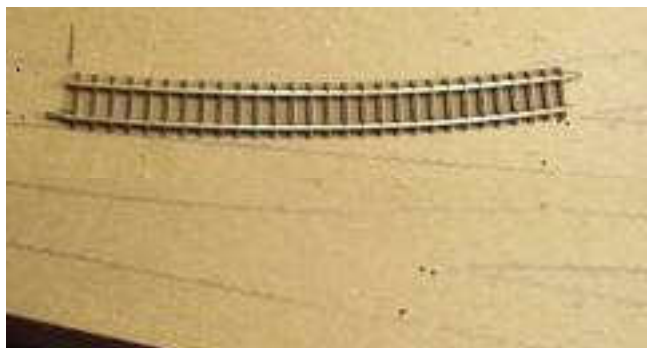

(Continuing on the other side)